



## Connector Tool Reference Chart

Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
106265	04A or 01A	06A	J-48817-3
106265	04A or 01A	06A	J-48817-3
1009297	09A	05A	J-48817-4
1009297	11A	J-48817-25	J-48817-27
15332141	J-48817-44	J-48817-45	J-48817-37
15449028	J-47003-11	01A	J-48817-4
54200212	03A	01A	J-48817-3
54200221	03A	01A	J-48817-3
54200221	03A	01A	J-48817-3
54200308	03A	01A	J-48817-3
54200309	03A	01A	J-48817-3
54200310	03A	01A	J-48817-3
54200409	03A	01A	J-48817-3
54200521	03A	01A	J-48817-3
54200522	03A	01A	J-48817-3
54200608	03A	01A	J-48817-3
98238N6F	07A	09A	J-48817-5
98238N6F	07A	09A	J-48817-5
09442111F	04A	J-48817-25	J-48817-27
09443201F	N/A	06A	J-48817-28
09443201F	N/A	J-48817-26	J-48817-28
1 928 403 874	N/A	06A	J-48817-3
1 928 403 874	N/A	06A	J-48817-3
1 928 403 968	N/A	06A	J-48817-3
10026841F	11A	J-48817-25	J-48817-27
11020W9A03-GR	02A	01A	J-48817-3
11020W9A03-GR	02A	01A	J-48817-3
1-10438608-1	04A	09A	J-48817-6
1-10438608-1	04A	09A	J-48817-6
11149W9A02F-GR	02A	01A	J-48817-3
11156W9A02F-GR2	02A	01A	J-48817-3
11349W9A03 (HS03FB)	02A	01A	J-48817-3
1-1703494-1	09A	J-48817-29	N/A
1-1703494-1	09A	J-48817-29	N/A
11858W9A6F-BYZ (HS06FB)	02A	01A	J-48817-3
282087-1	04A	01A	J-48817-4



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
282087-1	04A	01A	J-48817-4
33472-874	04A	J-47003-15	J-48817-4
33472-874	04A	J-47003-15	J-48817-4
805-121-501F	04A	J-48817-25	J-48817-27
98200WQA03FBA	11A	11A	J-48817-5
A02FW	01A	09A	J-48817-4
A03FW	01A	09A	J-48817-4
A03FW	01A	09A	J-48817-4
A03MW	01A	09A	N/A
A03MW	01A	09A	N/A
A06FGY	01A	09A	J-48817-4
A06FW	01A	09A	J-48817-4
A12FG	01A	09A	J-48817-4
A12FW	01A	09A	J-48817-4
AAC06FB-WP	J-48817-40	J-48817-40	J-48817-5
AAZ02FB	07A	09A	J-48817-5
AAZ08FB	07A	09A	J-48817-5
ACA02FOR	N/A	N/A	N/A
ACA02FY-2V	N/A	N/A	N/A
ADY03FB (HSG-ATS-SPBA0805/3FB)	01A	J-48817-25	J-48817-27
ADY03FB (HSG-ATS-SPBA0805/3FB)	01A	J-48817-25	J-48817-27
AFZ04FB	11A	11A	J-48817-3
AFZ04FB	11A	11A	J-48817-3
AHYS02FB	04A	06A	J-48817-3
AHYS02FB	04A	06A	J-48817-3
BD16FW	01A	11A	J-48817-5
BD16FW	01A	11A	J-48817-5
BS02FB	01A	06A	J-48817-3
BS02FB	01A	06A	J-48817-3
BS02FGY-BH	01A	06A	J-48817-3
BS02FGY-BH	01A	06A	J-48817-3
C02MBR-P	01A	11A	N/A
C02MBR-P	01A	11A	N/A
CEA01FB-CHA2	01A	13A	J-48817-7
CEA01FB-CHA2	01A	13A	J-48817-7
CEA03FW	01A	13A	J-48817-7
CEA03FW	01A	13A	J-48817-7



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
Delphi_15489798	N/A	06A	J-48817-4
Delphi_15489798	N/A	06A	J-48817-4
E01FGY	04A	11A	J-48817-3
E02FBR-RS-GY	04A	11A	J-48817-3
E02FB-RS	04A	11A	J-48817-3
E02FG-RS-LGY	04A	11A	J-48817-3
E02FGY-RS	04A	11A	J-48817-3
E02FL-RS	04A	11A	J-48817-3
E02FL-RS-LGY	04A	11A	J-48817-3
E03FGY-RS	04A	11A	J-48817-3
E03FGY-RS	04A	11A	J-48817-3
E04FGY-RS	04A	11A	J-48817-3
E05FGY-RS	04A	11A	J-48817-3
E06FGY-RS	01A	11A	J-48817-3
FC1240PC	04A	12A	J-48817-3
FC1240PC	04A	12A	J-48817-3
FEA02FGY-LC	04A	06A	J-48817-3
FEA02FGY-LC	04A	06A	J-48817-3
FEA03FB-LC	04A	06A	J-48817-3
FEA04FB-FHA2-LC	04A	J-47003-14	J-48817-7
FEA04FB-FHA2-LC	04A	J-47003-14	J-48817-7
FEA09FB-FHA6-SA	01A	11A	J-48817-5 / J-48817-3
FEA09FB-FHA6-SA	01A	11A	J-48817-5 / J-48817-3
FEA09FW-FHA6-SA	01A	11A	J-48817-5 / J-48817-3
FHZ02FB	04A	12A	J-48817-3
FHZ02FB-1V	04A	12A	J-48817-3
HK02FY-1V-EX-LC	01A	01A	J-48817-4
HK02FY-1V-EX-LC	01A	01A	J-48817-4
HS02FB-4V	02A	01A	J-48817-30
HS02FGY	02A	01A	J-48817-3
HS02FGY	02A	01A	J-48817-3
HS02FGY-SJZ2	01A	04A/ 01A	J-48817-3/ J-48817-36
HS02FL	02A	01A	J-48817-3
HS02FLGY-VR	01A	01A	J-48817-3
HS02FW	02A	01A	J-48817-30



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
HS03FB (WPC025-03FB)	01A	10A	J-48817-6
HS03FB-2V	02A	01A	J-48817-30
HS03FGY	04A	07A	J-48817-3
HS03FGY	02A	01A	J-48817-3
HS05FB-1V	02A	01A	J-48817-3
HS05FGY	02A	01A	J-48817-30
HS05FW	04A	01A	J-48817-30
HS08FGY	04A	01A	J-48817-30
HSG 114184639F	04A	J-48817-25	J-48817-5
HSG 114184639F	04A	J-48817-25	J-48817-5
HSG 184355-2M	03A	01A	N/A
HSG 184355-2M	03A	01A	N/A
HSG F986410F	04A	J-47003-14	J-48817-28
HSG F986410F	04A	J-47003-14	J-48817-28
HSG-805-120-501B	04A	J-48817-25	J-48817-27
HSG-805-120-502F	04A	J-48817-25	J-48817-27
HSG-805-120-507F	04A	J-48817-25	J-48817-27
HSG-805-120-508F	04A	J-48817-25	J-48817-27
HSG-805-121-502F	04A	J-48817-25	J-48817-27
HSG-805-121-504F	04A	J-48817-25	J-48817-27
HSG-805-122-522F	04A	J-48817-25	J-48817-27
HSG-805-124-521F	04A	J-48817-25	J-48817-27
HSG-805-198-501F	N/A	J-48817-26	J-48817-28
HSG-805-198-506	N/A	J-48817-26	J-48817-28
HSG-805-200-501F	N/A	J-48817-26	J-48817-28
HSG-805-299-501F	N/A	J-48817-26	J-48817-28
JAA07FB	N/A	11A	J-48817-31
JAA07FB	N/A	11A	J-48817-31
JAD08FB-5P (HSG-ATS-SPBA0805)	04A	13A	J-48817-4
JAD08FB-5P (HSG-ATS-SPBA0805)	04A	13A	J-48817-4
JAD08FB-5P (HSG-ATS-SPBA0806)	04A	13A	J-48817-4
JCA02FB	N/A	N/A	N/A
JCA02FG	N/A	N/A	N/A
JCA02FOR	N/A	N/A	N/A
K02FB	09A	07A	J-48817-6
K02FB	09A	07A	J-48817-6



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
M02FW-LC	N/A	02A	J-48817-2
M04FW-LC	N/A	02A	J-48817-2
MUB12FB	01A	13A	J-48817-6
MUB12FB	01A	13A	J-48817-6
NH10MW-CS10	07A/ 09A	07A/ 09A	N/A
NS03FW-CS	09A	09A	J-48817-3
NS03FW-CS	09A	09A	J-48817-3
NS04FW-CS	09A	09A	J-48817-3
NS06FW-CS	09A	09A	J-48817-3
NS06MW-CS	09A	09A	N/A
NS06MW-CS	09A	09A	J-48817-3
NS06MW-CS	09A	09A	J-48817-3
NS08FW-CS	09A	09A	J-48817-3
NS10MW-CS	09A	09A	N/A
NS16FW-CS	09A	09A	J-48817-3
P01FB-A	01A	08A	J-48817-2
P01FB-A	01A	08A	J-48817-2
P01FB-BR-A	01A	08A	J-48817-2
PEX02FB	J-47003-11	01A	J-48817-4
PEX02FB	J-47003-11	01A	J-48817-4
PEY02FB	04A	13A	J-48817-4
PEY02FB	04A	13A	J-48817-4
PHB02FB	N/A	06A	J-48817-3
PHB02FB	N/A	06A	J-48817-3
RH02FB	01A	10A	J-48817-5
RH02FBR	01A	10A	J-48817-6
RH02FGY	01A	10A	J-48817-5
RH02FLGY	01A	10A	J-48817-6
RH02MB	J-47003-11	01A	N/A
RH02MGY	J-47003-11	01A	N/A
RH03FB	01A	10A	J-48817-5
RH03MB	J-47003-11	01A	N/A
RH04FB	01A	10A	J-48817-5
RH04FDGY-P	01A	10A	J-48817-6
RH04FLGY-P	01A	10A	J-48817-5
RH04MB	J-47003-11	01A	N/A
RH04MDGY-BR	J-47003-11	10A	N/A
RH04MDGY-BR	J-47003-11	10A	N/A
RH06FB	01A	10A	J-48817-5



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
RH06FB	01A	10A	J-48817-5
RH06FB-1V	01A	10A	J-48817-5
RH06FLGY	01A	10A	J-48817-6
RH06MB	J-47003-11	J-48817-33	N/A
RH08FB	01A	10A	J-48817-5
RH10FB	01A	10A	J-48817-5
RH12FB	01A	10A	J-48817-5
RK02FB	01A	01A	J-48817-4
RK02FBR	01A	01A	J-48817-4
RK02FBR-DGY	01A	11A	J-48817-4
RK02FGY	01A	11A	J-48817-4
RK02FL	01A	11A	J-48817-4
RK02MGY	J-47003-11	11A	N/A
RK02MGY	J-47003-11	09A	N/A
RK02MGY	J-47003-11	11A	N/A
RK02ML	J-47003-11	09A	N/A
RK02ML-B	01A	11A	N/A
RK03FB	01A	01A or 11A	J-48817-4
RK03FB	01A	01A or 11A	J-48817-4
RK03FB	01A	01A or 11A	J-48817-4
RK03FBR	01A	01A	J-48817-4
RK03FG-GY-BD	01A	01A	J-48817-4
RK03MBR	J-47003-11	11A	N/A
RK04FY-BD	N/A	N/A	N/A
RK06FGY	01A	01A or 11A	J-48817-4
RK22FGY	01A	01A	J-48817-4
RS01FB	03A	11A	J-48817-3
RS02FB	03A	03A	J-48817-3
RS02FGY	03A	11A	J-48817-3
RS02MGY	03A	11A	N/A
RS02MGY	03A	11A	N/A
RS03FB	03A	11A	J-48817-3
RS04FG	03A	03A or 11A	J-48817-3
RS04FG-GY	04A or 03A	11A	J-48817-3
RS04FG-GY	04A or 03A	11A	J-48817-3
RS04FGY-PR	03A	11A	J-48817-3
RS04FGY-PR	03A	11A	J-48817-3
RS04FL	03A	03A or 11A	J-48817-3
RS04MGY	03A	11A	N/A



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
RS06FG	03A	11A	J-48817-3
RS06FGY-PR	03A	11A	J-48817-3
RS08FB-PR-H-SWN	03A	11A	J-48817-3
RS08FGY-PR	01A	11A	J-48817-3
RS08MGY-PR	03A	11A	N/A
RZ02FGY	01A	J-48817-35	J-48817-27
RZ02FGY	01A	J-48817-35	J-48817-27
S02FL	01A	04A	J-48817-3
S02FW-US	01A	04A	J-48817-3
S02FW-US	01A	04A	J-48817-3
SAZ02FB-VR	04A	13A	J-48817-5
SAZ04FGY	04A	13A	J-48817-5
SAZ06FB	04A	13A	J-48817-5
SAZ06FB	04A	13A	J-48817-5
SAZ08FGY	04A	13A	J-48817-5
SCZ02FGY	11A	11A	J-48817-5
SCZ02FGY	11A	11A	J-48817-5
SGZ06FGY-S	09A	01A	J-48817-30
SGZ06FGY-S	09A	01A	J-48817-30
TB02FW	01A	06A	J-48817-3
TB02FW	01A	06A	J-48817-3
TB03FW-LC	01A	06A	J-48817-3
TER 12191811	J-48817-44	J-48817-45	J-48817-37
TER 1393367-1	J-48817-40	J-48817-40	J-48817-5
TER 502307-0111	J-48817-41	J-48817-42	J-48817-7
TER502306-3212F	J-48817-41	J-48817-43	J-48817-6
TH04FW-NH	07A	07A	J-48817-5
TH04FW-NH	07A	07A	J-48817-5
TH04MW-NH	07A	07A	N/A
TH04MW-NH	07A	07A	N/A
TH08FW-NH	07A	07A	J-48817-5
TH08MW-NH	07A	07A	N/A
TH10FB-NH	07A	07A	J-48817-5
TH12FW-NH	07A	07A	J-48817-5
TH12MW-NH	07A	07A	N/A
TH16FW-NH	07A	07A	J-48817-5
TH18FW-CS2	09A	09A	J-48817-3
TH24FB-NH	07A	07A	J-48817-5
TH24FW-NH	07A	07A	J-48817-5



Connector Type	Retainer Removal Tool (RRT)	Terminal Removal Tool (TRT)	Terminal Tightness Gauge
TH32FW-NH	07A	07A	J-48817-5
TH40FB-NH	07A	07A	J-48817-5
TH40FG-NH	07A	07A	J-48817-5
TH40FW-NH	07A	07A	J-48817-5
TK02FBR	01A	11A	J-48817-4
TK02FW	01A	11A	J-48817-4
TK02FY-1V-BD	N/A	N/A	N/A
TK02FY-EX	N/A	N/A	N/A
TK02MBR-P	01A	11A	N/A
TK02MW	01A	11A	N/A
TK03FW	01A	11A	J-48817-4
TK03FW	01A	11A	J-48817-4
TK04FY	N/A	N/A	N/A
TK06FGY	01A	11A	J-48817-4
TK06FW-1V	01A	11A	J-48817-4
TK06MW-1V	01A	11A	N/A
TK06MW-1V	01A	11A	N/A
U02FB	04A	04A	J-48817-3
U03FB	04A	01A	J-48817-3
U03FB	04A	01A	J-48817-3
VHR-7N	N/A	11A	J-48817-31
W02FW	09A	06A	J-48817-28
WBS1006N	N/A	06A	N/A
WBS-3013	N/A	06A	N/A
WP8+A03F-A GR2 (SJZ01FGY-SNZ2)	04A	04A	J-48817-4
WP8+A03F-A GR2 (SJZ01FGY-SNZ2)	04A	04A	N/A
X01FGY	01A	01A	J-48817-2
X01FGY	01A	01A	J-48817-2
YDX06FB-HS4	01A	07A	J-48817-30
YLA06FGY	01A	01A	J-48817-2
YLA06FGY	01A	01A	J-48817-2
YV02FGY	01A	13A	J-48817-4
YV02FGY	01A	13A	J-48817-4
Z02FBR	09A	07A	J-48817-4
Z02FBR	09A	07A	J-48817-4